


HOME DECORATORS C O L L E C T I O N

BF-25390 BUFFORD HAMPER 27"Hx35"Wx14"D

INV#28261












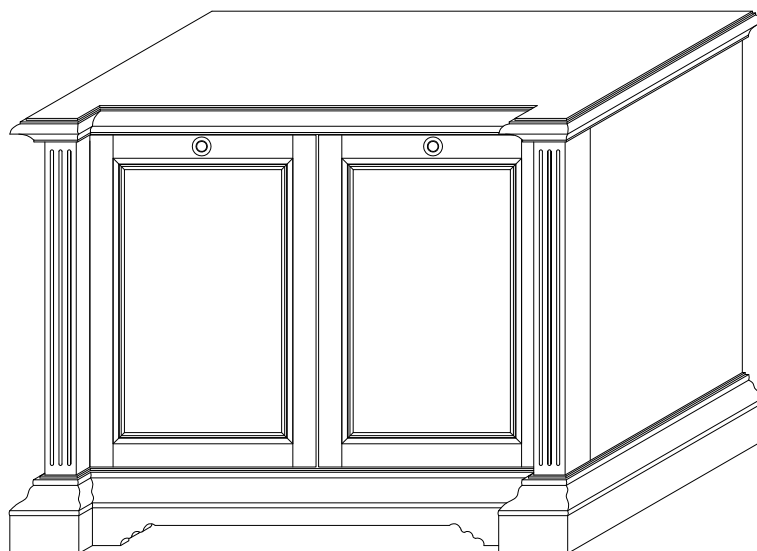
ASSEMBLY INSTRUCTIONS

Made In China



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.


PARTS LIST		
A  TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC
D  STAND PANEL-1PC	E  BOTTOM PANEL-1PC	F  BACK PANELS-2PCS
G  (BUCKET) FRONT PANELS-2PCS	H  (BUCKET) SIDE PANELS-4PCS	I  (BUCKET) BACK PANELS-2PCS
J  (BUCKET) BOTTOM PANELS-2PCS	K  CAM-TOOL-1PC	L  CAM-BOLTS-12PCS

M



CAM-LOCKS-12PCS


N



FEET-4PCS

O

7mm× 5/8"



SCREWS-24PCS

P



HANDLES-2PCS

Q


8mm× 5/8"



SCREWS-2PCS


R

6mm× 3/4"



SCREWS-24PCS


S



HINGES-4PCS

T

7mm× 5/8"



SCREWS-28PCS



U



BAGS-2PCS




NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY. PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

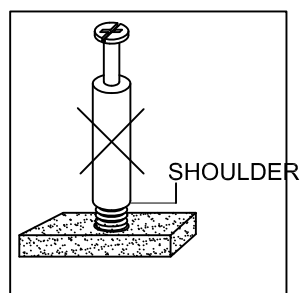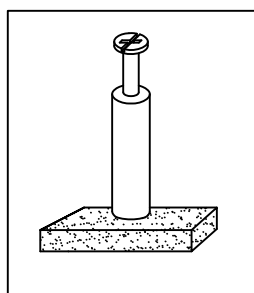


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

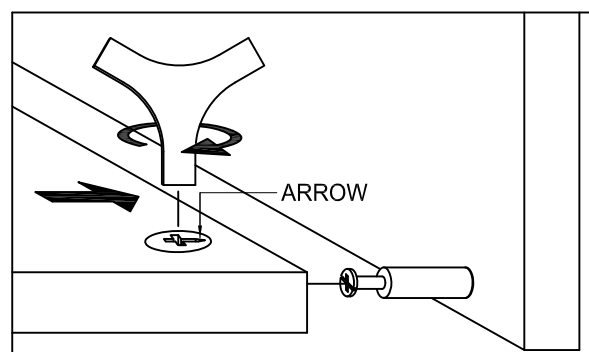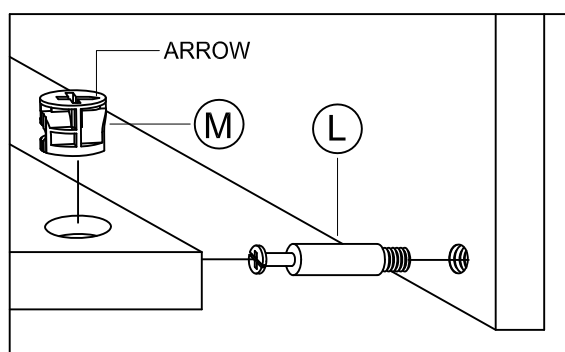


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

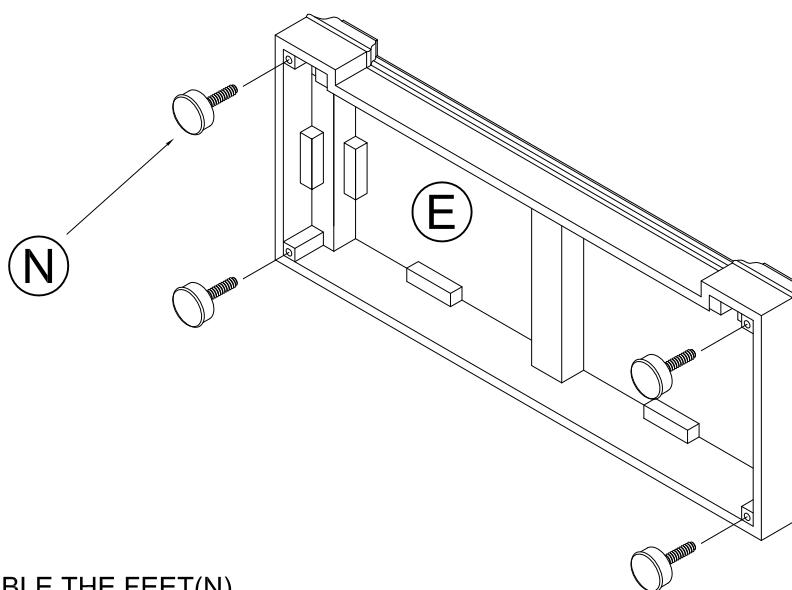

1). ASSEMBLE THE FEET(N).


- ROTATE 4 FEET(N) INTO THE HOLES IN THE BOTTOM PANEL(E).

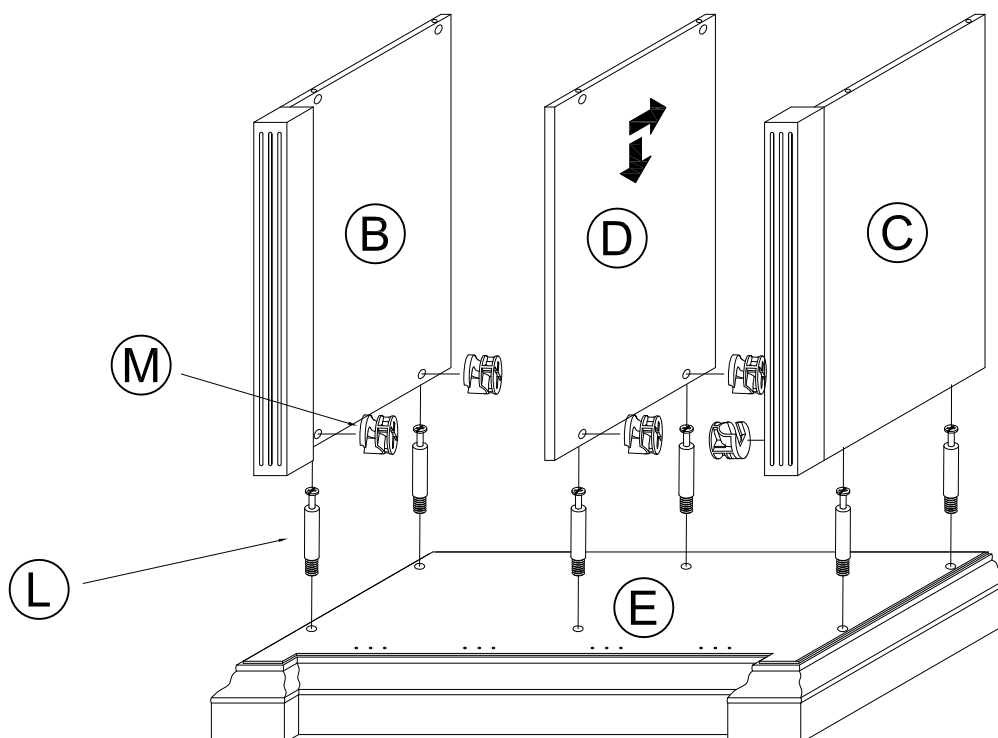

2). ASSEMBLE THE PANEL(B/C/D).


- ROTATE 6 CAM-BOLTS(L) INTO THE HOLES IN THE BOTTOM PANEL(E).
- PLACE CAM-BOLTS(L) INTO THE HOLES IN THE PANEL(B/C/D) AND ATTACH USING 6 CAM-LOCKS(M).

ASSEMBLE BOTH BUCKETS USING THESE INSTRUCTIONS
(QTY'S OF PARTS ARE DOUBLED FOR THAT REASON).

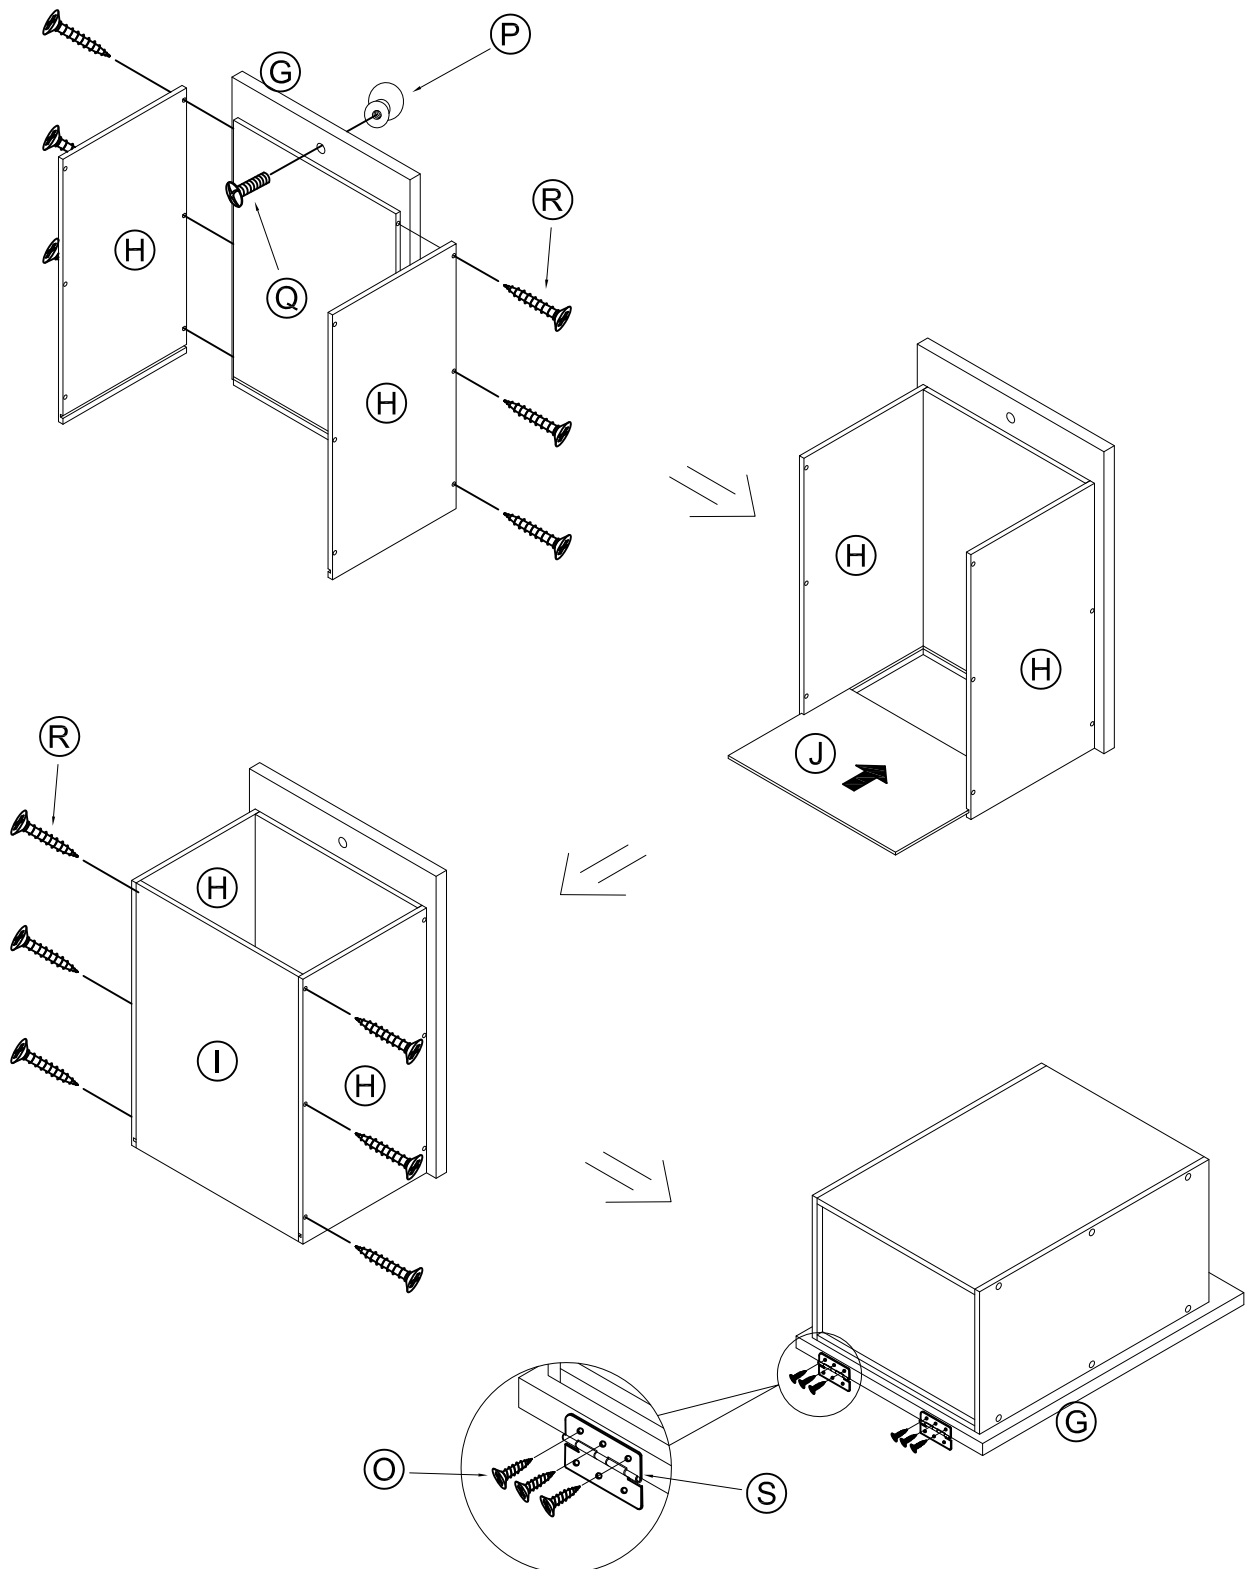


3). ASSEMBLE THE BUCKET.

- ATTACH SIDE PANELS(H) TO FRONT PANEL(G) USING 12 SCREWS(R).
- ATTACH THE HANDLE(P) TO FRONT PANEL(G) USING 2 SCREWS(Q).
- INSERT THE BOTTOM PANEL(J) INTO THE SLOTS IN THE PANELS(H).
- ATTACH THE BACK PANEL(I) BETWEEN SIDE PANELS(H) USING 12 SCREWS(R).
- ATTACH THE HINGES(S) TO FRONT PANEL(G) USING 12 SCREWS(O).

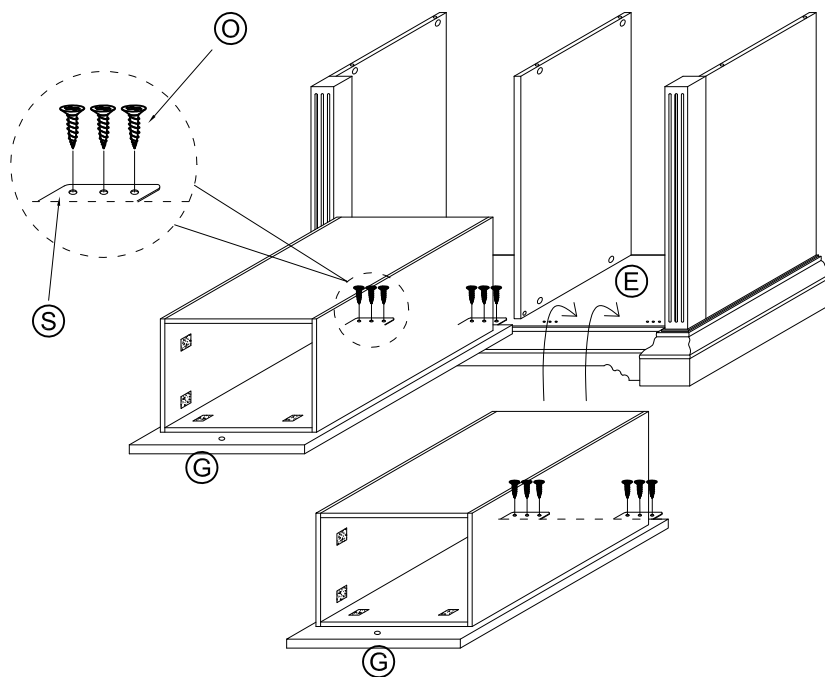


4). ASSEMBLE THE BUCKETS.

- ATTACH THE FRONT PANELS(G) TO BOTTOM PANEL(E) USING 12 SCREWS(O).

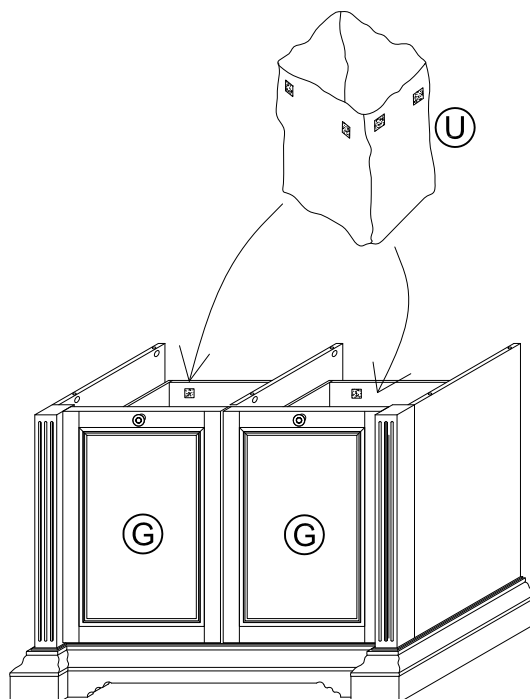


5). ASSEMBLE THE BAGS(U).

- PUT THE BAGS(U) INTO THE BUCKETS.

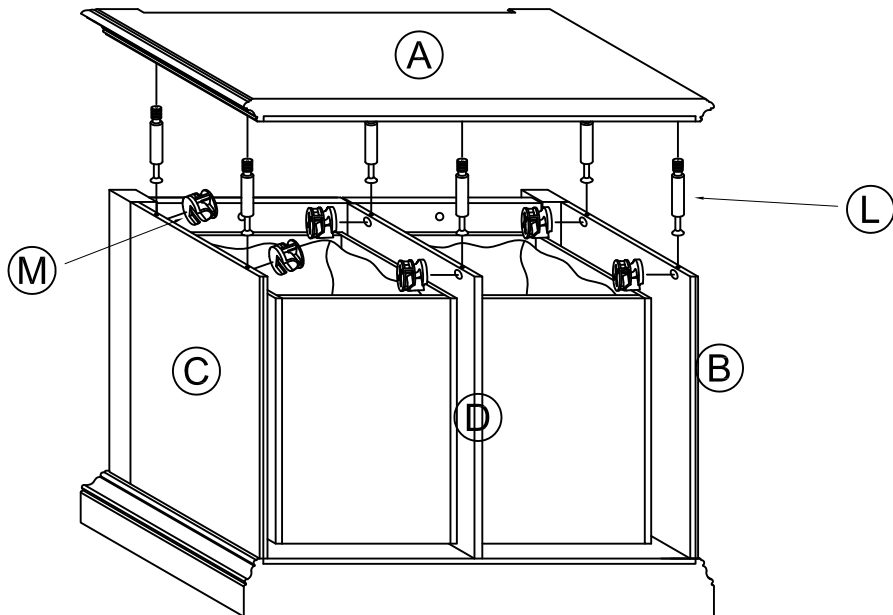

6). ASSEMBLE THE TOP PANEL(A).

- ROTATE 6 CAM-BOLTS(L) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(L) INTO THE HOLES IN THE PANEL(B/C/D) AND ATTACH USING 6 CAM-LOCKS(M).
- NOTE: TILT OUT BUCKETS TO ATTACH CAM-LOCKS.

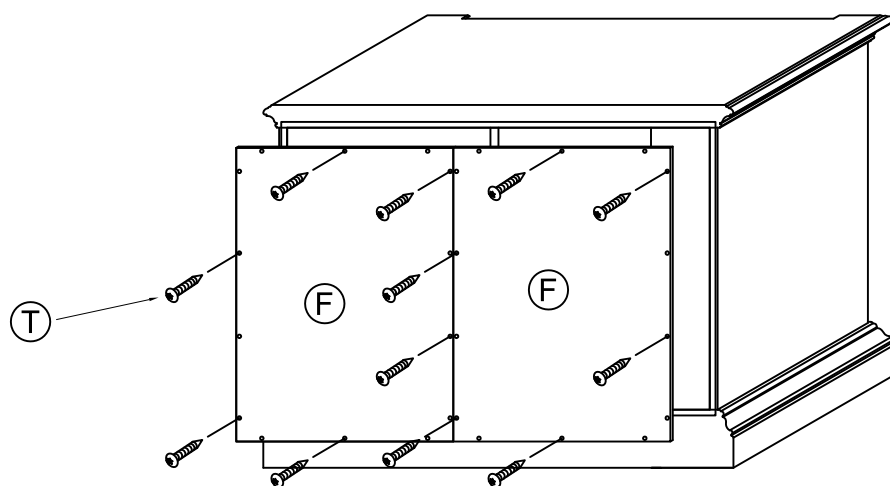

7). ASSEMBLE THE BACK PANELS(F).

- ATTACH THE BACK PANELS(F) USING 28 SCREWS(T).